

To Configure Honeywell/HHP 2D scanner, scan each barcode in order

1)



Standard Product Default Settings

2)



* Default Data Format

3)



Clear All Data Formats

4)



USB Keyboard (PC)

5)



5 Digit Addenda On

6)



Off